



Special Features

- Re-Fitting
- First submerge the keg spear in water or check the spear inside and outside via light.
- Place the keg spear into the keg neck. This is done by dropping them into the keg neck and rotating the spear fully clockwise.
- Slip a new retaining ring over the spear
- Place tool onto the keg neck and rotate the bar handle clockwise.
- Take one end of the ring, and place it into the neck groove.
- Feed the remainder of the ring into the groove, ensuring that it is fully seated in the groove.

Note: This part of the procedure will require a little practice before a level of proficiency is obtained.